


V1.7 - August 2024 Manual



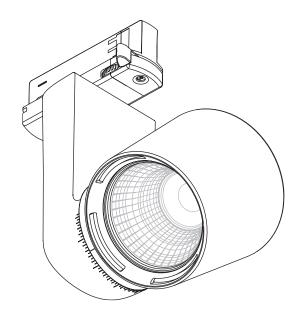

Installation Eutrac	5
Programming	6
Wireless DMX	6
Bluetooth by Casambi	6
Programming table	7
Barndoor assembly	8

Snoot / half snoot assembly 9 Honey comb assembly Accessories Accessory combinations List of symbols

SAFETY INFORMATION











Disconnect the power supply before installing or maintaining

Make sure all connectors are connected properly

Use a source of AC power that complies to local electrical codes


Block access below the work area when maintaining the unit

Don't modify or install genuine parts on this product Don't install in a flammable or explosive area


Warning! Some surfaces can be hot

CONTENT



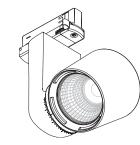



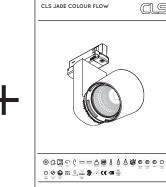











DRIVER DRIVER


















RGB-A


RGB-W RGB-W CLS


TECHNICAL


INSTALLATION


WITH GLOBAL ADAPTER

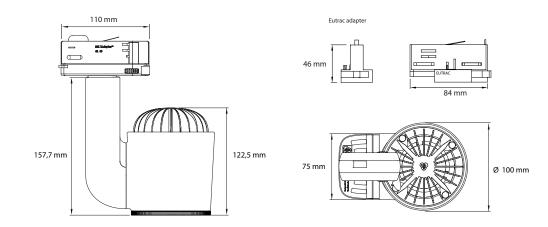


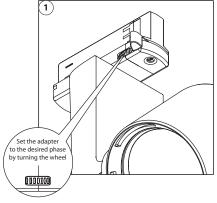

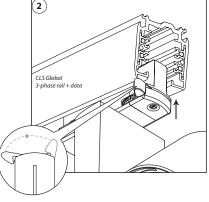

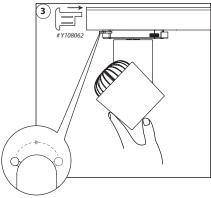

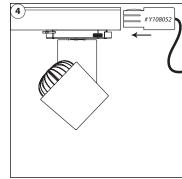

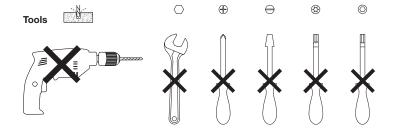

SPECIFICATIONS

LED: CLS Dynamic Colour CoB

Colour changing: RGBW (3000K), RGBW (4000K) or RGBA

Tunable White: 1800K-4000K & 2700K-6500K Beam angle: 23°, 45° or 69°

Beam angle: 23°, 45° or 69° Power supply: 100 ~ 240 VAC

Power consumption: Max. 30 Watt (1450 lumen)


Housing: Black, grey or white PC (PC-ABS V0)


Heatsink black or white coated aluminium

Weight: 780 gram IP value: IP20

Measurements: 157,7 x 100 x 100 mm (hxwxd)

Ambient temperature: -10° C till +40° C

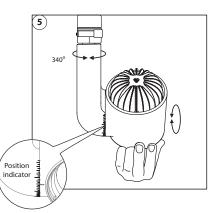

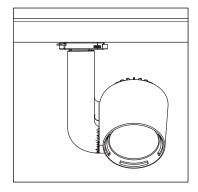








INSTALLATION


WITH EUTRAC ADAPTER


PROGRAMMING

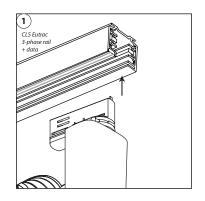


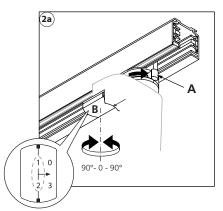

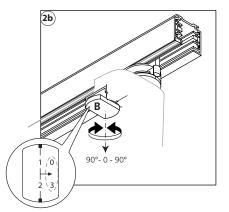

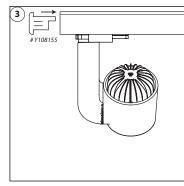

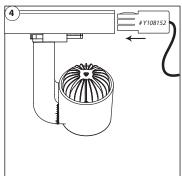

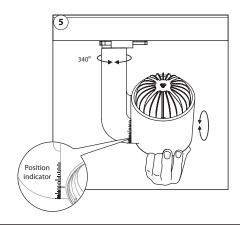



5


All settings can be configured via DMX. Settings can be configured at once or separately. When one or a couple settings needs to be changed just leave all other setting values zero. This keeps those settings unchanged. Please check the table for more information.

Always use a DMX controller with digital interface. If not available, you can purchase the CLS D-ta DMX addresser unit (#122200).

First make sure to set the DATA on the DMX controller. To program the setting into the LED fixture follow the next steps.

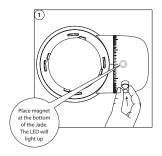

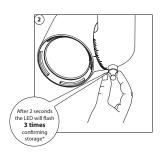

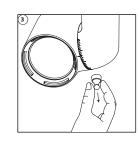

* If the LEDs flashes 10 times, something went wrong. Please try again. If the problem continues to occur, please contact your local sales distributor.

WIRELESS DMX

See the Manual of Wireless Solutions. The Manual can be found on our CLS website, in the Downloads section. Or use the link below https://www.cls-led.com/wp-content/uploads/cls-files/W-DMX-manual.pdf

Unlink procedure

When the fixture does not receive a DMX signal (DMX controller off), place the magnet on the bottom of the fixture for 5 seconds. Slow flash indicates that the fixture is unlinked.

BLUETOOTH BY CASAMBI

For Casambi controlled fixtures, see the manual of Casambi. The Manual can be found on our CLS website, in the Downloads section. Or use the link below:

https://www.cls-led.com/wp-content/uploads/cls-products/CLS_CASAMBI/MANUAL/Manual_Casambi_controlsystem_EN.pdf



Max. 20 pieces of Jade Colour Flow can be connected in a group. Max. 20 pieces of Jade Colour Flow per DMX line on a rail.







PROGRAMMING TABLE

BARNDOOR ASSEMBLY

			PROGRAMMING T	ABLE
DMX	Function	Data	Parameters	Description
	Set address	0	0 = no change *	Use this DMX channel to set address from 001 to
CH1	001 to 255	1255	DMX address = 1255	255. The configured DMX address is called "n"
	Set address	0	no change	Use this DMX channel to set address from 256 to
CH2	256 to 508	1255	DMX address = 256508	508. The configured DMX address is called "n"
		0	no change	
	Static	1	last DMX value *	If no DMX is present the fixture will respond like set
CH3	behavior	2	output off	in this function.
		3	load static values	in this function.
	Soft dim	0	no change	When dynamic softdim is activated an extra DMX
		1	off *	channel behind the colours and/or Master controls
CH4		2	dynamic	the soft dim reaction. If fixed no extra DMX channel is used.
		3-250	fixed interpolation delay	
	Master control	0	no change	If master is first channel is selected the channel will
		1	no master used *	be DMX channel "n". If master is last channel is
CH5		2	master is first channel	selected the channel will be "n+x"
	Control	3	master is last channel	("x" is calculated in the output patch).
		0		(x is calculated in the output patch).
		1	no change DMX channel n	Each output channel can be patched to respond to
CH6	Output 1	2	DMX channel n DMX channel n+1	the desired DMX channel. This enables the user to
CH6	patch			mix up the colours according to the controller that is
		3	DMX channel n+2	used.
			DMX channel n+3	uscu.
		0	no change	Example: all outputs are patched as 1
	Output 2 patch	1	DMX channel n	All outputs will be controlled by DMX channel "n". If
CH7		2	DMX channel n+1	master is used total DMX channels will be 2
		3	DMX channel n+2	otherwise it uses 1 channel ("x" = 1).
		4	DMX channel n+3	
		0	no change	Example: output 1&2 are patched as 1 and 3&4 are
	Output 3 patch	1	DMX channel n	patched as 2
CH8		2	DMX channel n+1	Output 1&2 will be controlled by DMX channel "n".
		3	DMX channel n+2	Output 3&4 will be controlled by DMX channel
		4	DMX channel n+3	"n+1".
	9 Output 4 patch	0	no change	If master is used total DMX channels will be 3
		1	DMX channel n	otherwise it uses 2 channels ("x" = 2).
CH9		2	DMX channel n+1	
		3	DMX channel n+2	
		4	DMX channel n+3	
	Static output	0	no change	Forth and the bound on the code of the code in the code of the cod
CH10	1	1	output off	Each output channel can be set to a static intensity.
	-	2255	intensity 2255 *(255)	If no DMX is present and Static behavior is set to
	Static output	0	no change	"load static values". The outputs will be set to the
CH11	Static output 2	1	output off	configured intensity values.
		2255	intensity 2255 *(255)	Loringuica intensity values.
	Static output	0	no change	
CH12	2 Static output 3	1	output off	
		2255	intensity 2255 *(255)	
	Chatia auturit	0	no change	
CH13	Static output	1	output off	
	4	2255	intensity 2255 *(255)	
CH14	Load default	0	no change	This function resets all settings to the Factory
СП14	settings	1	load Factory settings	setting.
	Input	0	no change	In 16 bit mode 2 channels are used per colour.
CH15		1	8 bit *	First channel is rough channel, second channel fine.
	setting	2	16 bit	16 bit mode is only available in DRIVE mode 2.
	Drive made	0	no change	
		1	compatible with version < 2020	You can set the frequency of the PWM for best
CUAC		2	PWM frequency 0.7kHz *	compatibility with Camera Systems. However, the
CH16		3	PWM frequency 1.4kHz	highest resolution of the dimming curve will be at
		4	PWM frequency 2.8kHz	the lowest frequency. Option 1 can be used to be
		5	PWM frequency 5.6kHz	compatible with older installation and new fixtures.
* 0	fault settina			

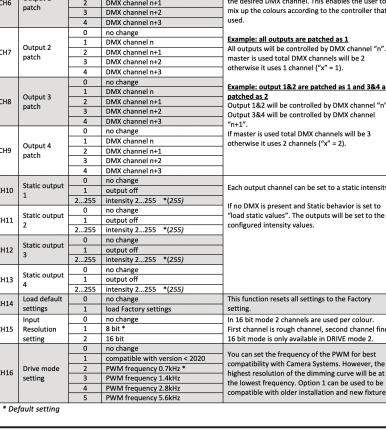


7

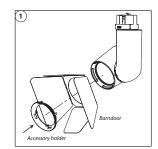

NL Plaats de accessoire houder met de 4 klikvingers in het midden van de montage gleuf op de Jade.


UK Place the accessory holder with the 4 click fingers in the middle of the mounting slot on the Jade.

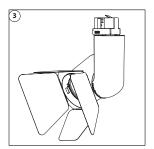

Als u de barndoor wilt roteren voor een juiste positie, dient u dit met 1 hand te doen en met de andere hand de accessoire houder op zijn plaats te houden.


Doet u dit niet, dan kunt u de accessoire houder losklikken!

If you want to rotate the barndoor to find the desired position, you need to keep the accessory holder with one hand on its place. If you don't do this you might release the accessory holder!

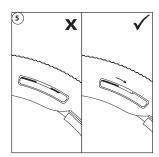

U voelt een weerstand en kunt nu de accessoire houder naar voren halen.

When you feel the resistance, pull the accessory holder out of the mountingslot.

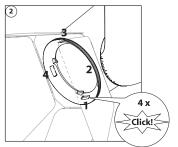


Druk krachtig aan, u dient een duidelijke 'klik' te horen.

Push firmly until you hear a clear 'Click' sound.



Verwijderen van de barndoor: draai de accessoire houder geheel naar links of naar rechts tot deze niet meer verder kan.

Removing the barndoor: rotate the accessory holder fully to the right or left, until you are not able to rotate it any further.

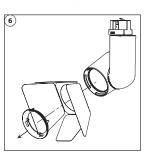








SNOOT / HALF SNOOT ASSEMBLY


HONEY COMB LOUVRE ASSEMBLY

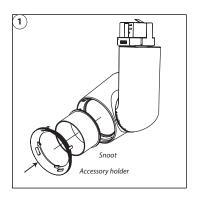


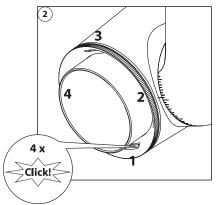





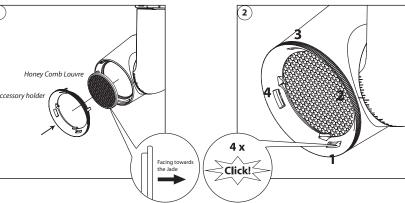


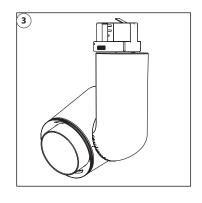


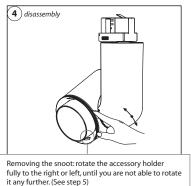


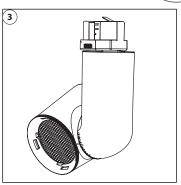


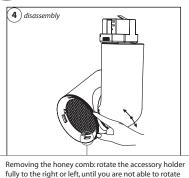

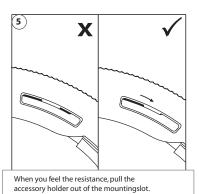

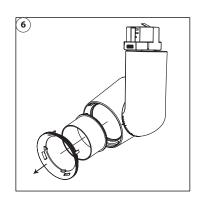

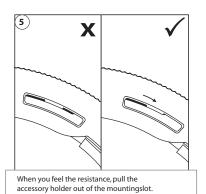

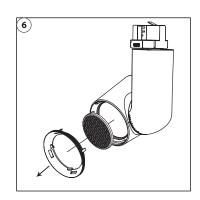

it any further. (See step 5)





ACCESSORIES

LIST OF SYMBOLS

ACCESSORIES

Global - black

Y108501-B CLS Global 3-phase rail + data 1 meter black Y108502-B CLS Global 3-phase rail + data 2 meter black CLS Global 3-phase rail + data 3 meter black Y108503-B Y108504-B CLS Global 3-phase rail + data 4 meter black Y108511-B CLS Global 3-phase rail + data end feed right, black Y108512-B CLS Global 3-phase rail + data end feed left, black Y108513-B CLS Global 3-phase rail + data middle feed black Y108515-B CLS Global 3-phase rail + data L-coupler inner black Y108516-B CLS Global 3-phase rail + data L-coupler outer black Y110938 CLS Global 3-phase rail + data end cap black

Global - grey

Y108501-G	CLS Global 3-phase rail + data 1 meter grey
Y108502-G	CLS Global 3-phase rail + data 2 meter grey
Y108503-G	CLS Global 3-phase rail + data 3 meter grey
Y108504-G	CLS Global 3-phase rail + data 4 meter grey
Y108511-G	CLS Global 3-phase rail + data end feed right, grey
Y108512-G	CLS Global 3-phase rail + data end feed left, grey
Y108513-G	CLS Global 3-phase rail + data middle feed grey
Y108515-G	CLS Global 3-phase rail + data L-coupler inner grey
Y108516-G	CLS Global 3-phase rail + data L-coupler outer grey
Y110935	CLS Global 3-phase rail + data end cap grey

ACCESSORIES

CLS D-Ta DMX tester/addresser unit 122200

Y106017 CLS Magnet pin (5 pcs)

Y106200-W CLS Jade Expo Snoot, white (black inside)

Y106201-B CLS Jade Expo Half Snoot, black

Y106201-W CLS Jade Expo Half Snoot, white (black inside)

Y106202-B CLS Jade Expo Barndoor, black


CLS Jade Expo Barndoor, white (black inside)

Y106215 CLS Jade Expo Honey Comb louvre

Y108501-G	CLS Global 3-phase rail + data 1 meter grey
Y108502-G	CLS Global 3-phase rail + data 2 meter grey
Y108503-G	CLS Global 3-phase rail + data 3 meter grey
Y108504-G	CLS Global 3-phase rail + data 4 meter grey
Y108511-G	CLS Global 3-phase rail + data end feed right, grey
Y108512-G	CLS Global 3-phase rail + data end feed left, grey
Y108513-G	CLS Global 3-phase rail + data middle feed grey
Y108515-G	CLS Global 3-phase rail + data L-coupler inner grey
Y108516-G	CLS Global 3-phase rail + data L-coupler outer grey
Y110935	CLS Global 3-phase rail + data end cap grey

Y106200-B CLS Jade Expo Snoot, black

Accessory Combinations

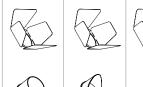















2024 CLS-LED BV. All rights reserved. Information subject to change without notice, CLS-LED BV and all affiliated companies disclaim liability for injury, damage direct or indirect loss, consequential or economic loss or any other loss occasioned by the use of, inability to use or reliance on the information contained in this manual. No part of this manual may be reproduced, in any form or by any means, without permission in writing from CLS-LED BV. Other legal information can be found in our General conditions, found on the back of your CLS-LED BV invoice, inside the CLS catalogue or on our website www.cls-led.com/General-Terms.pdf

11

















Swivel Fixture is horizontally rotatable, indicated in degrees



Fixture is vertically rotatable, indicated in degrees



Multiple connection Daisychain connectivity



Installation denth In centimeters







Cable length Maximum cable attached to the fixture in centimeters



Driver Inclusive or exclusive Internal or external



Weight In grams/kilograms



Pressure Maximum pressure on the fixture in kg/cm



Of the light source in hours













LEDs

Plug & play

IP value



Performance Zoom Adjustable beam angle



Kind of LED used in the fixture



Easy connection using the SmartConnect system



Ingress Protection classifies the degrees of protection provided against the intrusion of the product







Colour changing RGB, RGB-W, RGB-A AWB or Tunable White







Colour

Retail & Food I FD modules Clothing, furniture, kitchens, jewellery, shoes broad most fish and











Minimal bending curve

Available colours;



Cutting length Indicated by the cutting marks



Pitch between the LEDs in millimeters

LED nitch



Power supply In VDC VAC or milliAmnere









DMX (DATE) Dimmable DMX dimmable or DALL



PWM dimmingTraditional PWM dimming, DMX analog or DMX Hybrid dim

Bluetooth controlled

Accurate dimming from 100 - 1% by using a magnet Dynamic Control Dynamic Power Control or Dynamic Temperature Contro

By Casambi

Magno dimming













Warranty





C€

3 or 5 years warranty on the product Conformité Européenne CE marking for free marketability of industrial goods within the EU



XICATO









